


Modulating Combustion Air System with VSUB 8/12/16/20 Blower, CPC-3 Controller and 460 volt VFD

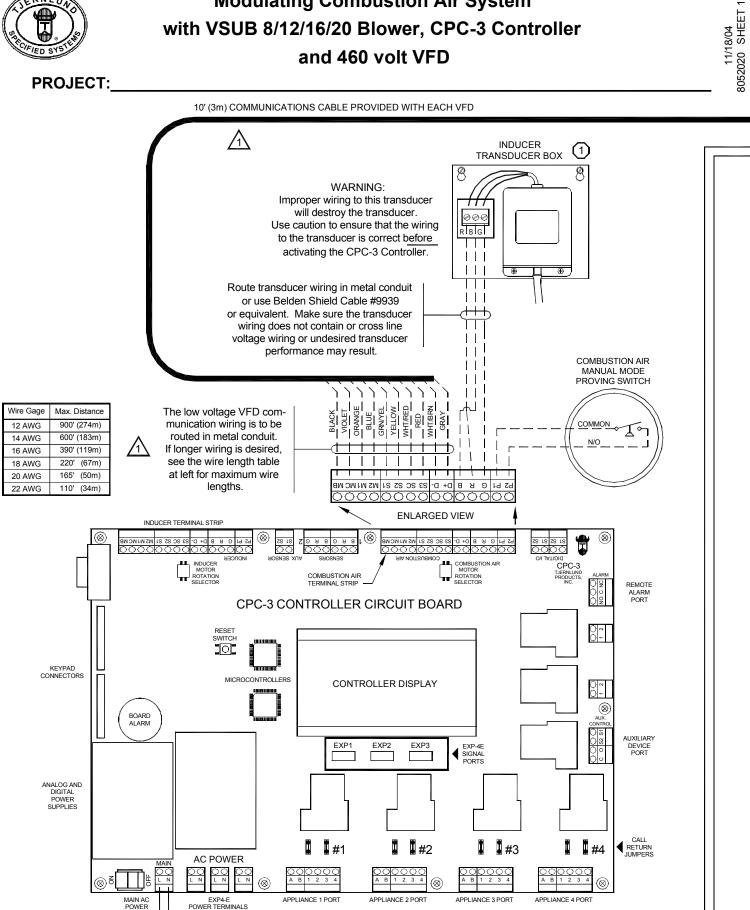

00000000

00000

 $\sqrt{3}$

FREEZE LIMIT

FFP-1 REFER TO FFP-1 INSTALLATION INSTRUCTIONS FOR DETAILS

HEAT LIMIT

Wiring is to be in dedicated metal conduit. Max. length:

100' (30m) @ 460 VAC

4 x 4 WEATHERPROOF **BOX AND WHIP** RED ORANGE

> BLUE GREEN

BLACK

RED

MOTOR HEATER

WARNINGS:

- (1) Improper wiring to the transducer will destroy the transducer. Use caution to ensure that the wiring to the transducer is correct before activating the CPC-3 controller.
- (2.) Verify that the input power voltage matches the VFD's nameplate rating before applying power. Improper supply voltage to the VFD could damage the VFD.
- (3.) Verify that the blower (VSUB 8/12/16/20) is wired for the output voltage from the VFD. If not correct, severe damage to the blower and/or the VFD could result.
- When the system is completely installed, perform the safety interlock and operational test as outlined in the installation manuals. Failure to do these tests could result in an unsafe and/or incorrectly operating system.

CAUTIONS:

- 1. All wiring must be in metal conduit (best) or shielded cable.
- 2. Route transducer wiring in metal conduit or use Belden Shield Cable #9939 or equivalent. Make sure the transducer wiring does not contain or cross line voltage wiring or undesired transducer performance may result.
- 3. Do not run the VFD's input power and output power wiring in the same conduit. Undesired VFD operation could result.

NOTES:

If the provided 10-foot, 10-wire VFD control cable is not long enough to meet the application needs, use caution to ensure that the connections from the VFD to the CPC-3 controller are correctly located. MB to MB, MC to MC, etc. In addition, reference the Wire Length Table.

Use caulking to seal the electrical box cover to the electrical box, and to seal the conduit holes to hole plugs.

If required, non-fused disconnects are to be supplied by the installer.

The FFP-1 will disable the combustion air blower when

